

Brooder Cut List

1 - 3/8" Plywood

Back: 17 1/2" X 55"

Sides: 17 1/2" X 32"

Front: 13 1/2" X 55"

Frame: 7 pcs - 2" X 2"


4 @ 55 1/2"

12 @ 28 1/2"


Floor & Doors Framing - 6 pcs 1 X 2"

Floor: 50 3/4" X 30 3/4" (with centered divider) Covered with 1/2" Hardware Cloth

Doors: 2 @ 27 3/4" X 19 1/2" Covered with 1/4" Hardware Cloth

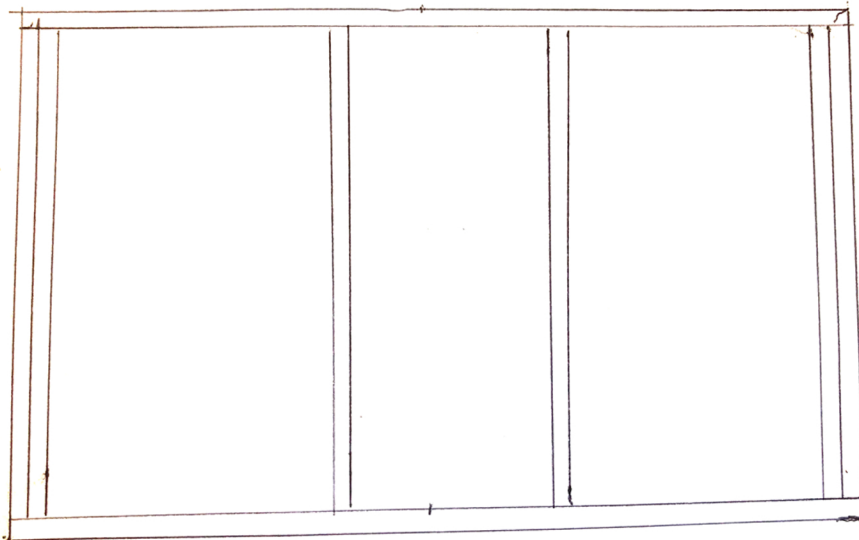


Framing: Top and Bottom

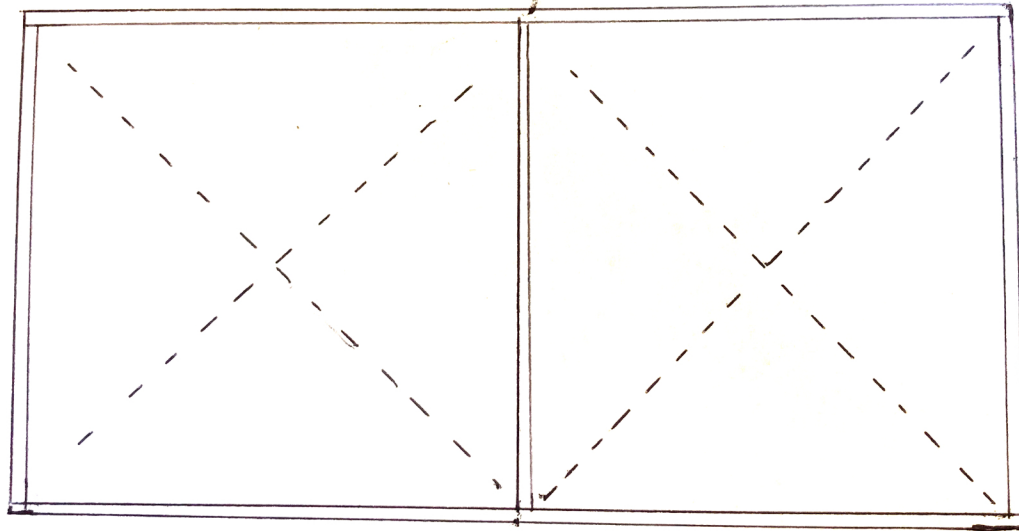

Floor is frame using 1" X 2" Furring strips and has a center divider. Cover floor with 1/2" Hardware cloth stapling to framework. Flooring is screwed in place 3" above bottom framework. The clean out trays sit on top of bottom framework.



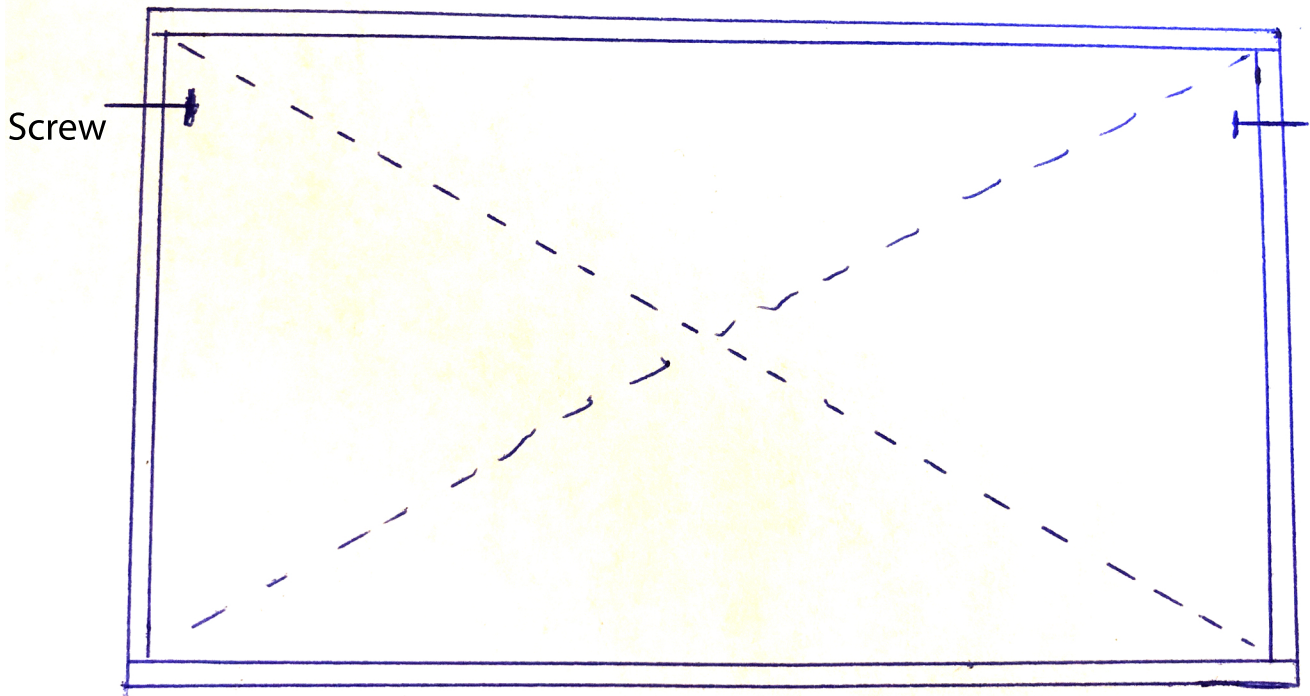

Doors are framed with 1" X 2" and covered with 1/4" Hardware cloth. Drill holes on opposite sides approximately 2" from outer edge. Fasten to frame using 2" Deck screws. Leave a little loose so door can pivot.





Front plywood piece is flush with top of brooder framework leaving a 3" gap at the bottom to remove cleanout trays.

Seal with Exterior grade house paint, waterproof sealant or epoxy to aid in clean up.

Video: <https://youtu.be/7Sh9f3qNMRY>